



GEMINI

ASTRONOMICAL TIMER

ECO APP GUIDE

Step 1 - Download the ECO Plugs App

Download the ECO Plugs from APPLE -App Store or Android -Google play.



ECO Plugs



(iOS 7 or higher)



(Version 4 or higher)

Step 2 - Product Overview



Switch: Press this button to turn the socket ON/OFF.

Default Setting: Back to default setting

- (1) Un-plug the device from power outlet.
- (2) Press and hold this button while plug into outlet.
- (3) When the Wi-Fi indicator from blinking to off, lasting for 2 more seconds.
- (4) Release the button to start your setting of step 3.



Wi-Fi Indicator status:

- a. Blinking: The device is waiting for configuration.
- b. Solid Light: Configuration is done, the device is accessible and controlled by WiFi.
- c. Light OFF: Reboot to the default setting.



Power Indicator: Display ON/ OFF status.



Socket: Plug in the appliance you want to control.



USB: Charging only, without controlled by Wi-Fi.(CT-064W Only)

Step 3 - Getting Started With Wi-Fi

*** Recommendation:**

To assist in the initial setup it is recommended that the distance between the **Home Router** and **Device** is minimized as much as possible. The closer the device is to the Home Router the easier it is to properly set up.

1. Insert ECO plugs device into power outlet. When the blue light is blinking, proceed to next step for smartphone setup, until blue light turns to solid.

* If blue light is not blinking at initial setting, please follow the "Default Setting" as indicate in STEP 2.

2. Smartphone's setup



Close the ECO plugs APP



On the smartphone under "menu" Select Settings



Select Wi-Fi



 
Set Wi-Fi On



Choose Network ECO-xxxxxxx. Exit the settings menu.

*If there are so many Wi-Fi of environment, in case you might waiting for a while. Thus, we recommend that you can directly tap the + on the top-left corner.

3. Open ECO Plugs APP

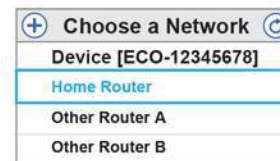

Tap the ECO Plugs

Select your Wi-Fi router that you want to link to the ECO plug device

An information box will appear.



Fill in country, zip code, device name (Lamp, TV, small appliances) and router password.

4. Press the Join/ Save Setting button to complete the setup



*iOS: If you can't find the **Join** button, please click the password section.



5. The ECO plugs device will appear on the APP home screen in approximately 1 minute.

6. Press the to turn the outlet on/off.

Step 4 - Start the Journey



- More** - Learning more information about this app.
- Electric Bill** - **Advanced Only**. Can easily monitor the electrical load and bill.
- Setting** - Setting your device, such as transfer local Wi-Fi into cloud mode, or rename the device.
- Timer** - Setting timer programs, has 5 different timer settings, can address 12 customized on/off programs.
- Programmable Timer** - Setting On/ Off events.
- Mail Box** - Welcome share any feedback on this App.
- Countdown Timer** - Setting countdown On/ Off events.
- Astronomic Timer** - Setting Sunrise or Sunset events.
- Holiday Random** - Three options to run at random times.
- Security Random** - Setting a range of time, run the irregular times.
- Random** - Outlet will power every 30 minutes based on the current timer
- Cloud Service** - Activate the remote access function, this means the device can be controlled through the cloud devices. This function is in the "setting" mode. The cloud can be controlled via outer Wi-Fi router; such as, 3G, public Wi-Fi, and other Wi-Fi routers.



* Please skip this step if you have a device only.

 
Step 7 - Control the Multi Devices



IF YOU HAVE MORE THAN ONE ECO PLUGS OUTLET PROGRAMMED ON THE APP (MORE THAN ONE CONTROLLED DEVICE): You can choose which ECO Plugs Outlet (which controlled device, such as lamp 1, lamp 2, etc.) you want to control by sliding the desired icon to the lower left position. The ECO Plugs Outlet name, such as "Light 1," will change color from white to yellow. Chosen device is now able to be programmed or edited, such as changing timer settings, updating cloud service, etc.
Note: You can connect to a maximum of twelve (12) ECO Plugs Outlets via the app.

* Please skip this step if you only use a Smartphone to control the device.

Step 5 - Add the Family Members into device

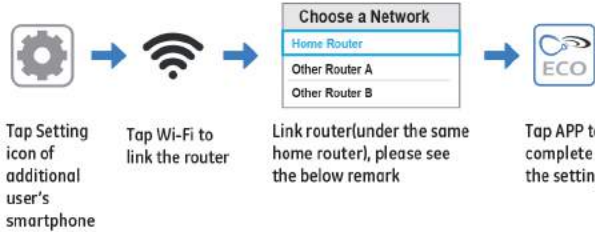

To add cloud icon to activate cloud service :



Remark:
When the second smartphone or tablet wants control the same device, just link the Wi-Fi router, which same as the device's connecting router before, then the second smartphone or tablet will display the same device and control it.

* Please skip this step if your device is without the Advance feature.

Step 8 - Power Management (Advanced Only)



POWER MANAGEMENT FUNCTION: Displays the power consumption of the selected controlled device. In this device does not have this function.

 
* Please skip this step if you have a device only.

Step 6 - Add multi "ECO Plugs" devices to the App

For example:



Device A



Device B ... Device D to be ready for setting up



Device A "light" has been set up successfully



Please refer to Step 3 to set up additional devices

Remark:
Please choose the Wi-Fi router nearest the new device when setting up multiple devices.

More Information

If you have problems with the set up, please click on the ECO Plugs link **More - Q&A** to get more information or send an email to us.



Questions, problems? Call our customer support line 8am-6pm EST, Mon.-Thur., 8am-5pm EST, Friday 1-888-269-7316

Warning for RC-028W

The device must be mounted in a vertical position with the receptacle facing downward and with the receptacle at least 2 feet above the ground level not for water immersion.